




Lid

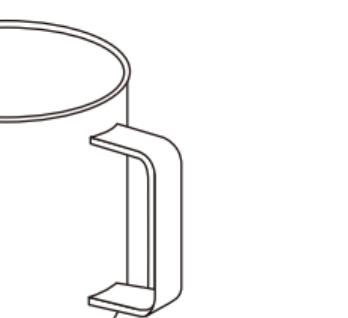

Mug



Silicone cover

English

Limited Warranty

- HYDY is committed to providing quality products. Damage and loss caused by improper use is not covered by the limited warranty. Consumers should produce invoices and proof of purchase within one year of consumption if any other defects are found. HYDY can provide the same or similar products to replace it.
- HYDY owns design patent and corresponding trademark.

User's Guide

- Hot water will increase pressure inside the sealed thermos bottle, and this may cause the cap difficult to open. If such happens, carefully turn on the cover to release the pressure so as to avoid injuries or burns.
- Long-term storage of drinks inside the thermos bottle is not encouraged and please consume the drinks as soon as possible.
- Do not fill in non-drinkable liquid, fuel or other flammable liquid, corrosive, chemical substances.
- Avoid exposure of thermos bottle to intense heat or cold.
- Do not put in places where infants or young children could come in touch with to avoid injury or burns.

- Drink carefully to avoid scalding if hot beverage is inside the thermos bottle. Due to the insulation effect brought by the vacuum, surface of the bottle will not get hot.
- Do not pour in excessive amount of beverage. Leave enough space inside the bottle. If the water level is too high, it will cause difficulties while opening; it may also cause overflow if you close the cap.
- When opening the cap, do not put it near your face, discharged hot air may cause burns.
- When driving, you are not recommended to consume hot

drinks as sudden emergence from the traffic situation may cause burns.

- Do not add beverages when the lower cap is not removed to avoid overflow or burns.

•

- Do not use a microwave oven, steam oven or oven to heat.
- Do not place near radiators, heaters, or other high-temperature source to avoid bottle deformation, discoloration.
- Do not put the following beverages inside the bottle: ice, carbonated drinks: will increase the pressure inside the bottle and make the cap not able to be open; pressure can also cause sudden discharge of beverage and eventually break the bottle.

Drink containing salt: such as agricultural soup ... etc; inside of the bottle is made of stainless steel and salt may cause rusting affecting its insulation abilities

Milk, milk drinks, fruit juice: Due to its perishable nature, long-term storage will produce biogas, so the internal pressure of bottle will increase causing sudden discharge of beverage and eventually break the bottle.

Capacity : 10oz / 300ml
Product Sizes : 100 mm X 115 mm (diameter x height)

Material : Thermos body: 18/8 (304) stainless steel

Silicone Cover : Silicone

•

- When you replace the silicone covers, put it on the table, scroll down the silicone cover to remove it can be removed. (For more details, please follow instructions)

When you need to install new set of cover, set the cover flat on a table and hold the bottom of the bottle to load the cover vertically downward onto the bottle.

Maintenance

- To keep it clean, wash thoroughly after every use. After washing, dry it thoroughly to avoid rust.
- Before cleaning, place the bottle, cap and silicone cover separately. Wash using diluted neutral dishwashing liquid. Wipe dry after washing thoroughly with water.

Use the complemented soft sponge brush to clean the inside layer of the bottle, wash with diluted neutral kitchen dish detergent, rinse thoroughly and wipe dry. Regular cleaning prevents odor.

- Do not add beverages when the lower cap is not removed to avoid overflow or burns.

•

- Do not use chlorine bleach, diluents, volatile oil, metal scouring pads or abrasive scouring pads and detergent to clean it.
- Do not place near radiators, heaters, or other high-temperature source to avoid bottle deformation, discoloration.
- Do not put the following beverages inside the bottle: ice, carbonated drinks: will increase the pressure inside the bottle and make the cap not able to be open; pressure can also cause sudden discharge of beverage and eventually break the bottle.

•

Se desaconseja almacenar bebidas dentro del termo durante largos períodos de tiempo. Consuma las bebidas lo antes posible.

No coloque el producto en una secadora de cubiertos o en agua hirviendo para realizar la limpieza o desinfección del mismo.

Avoid dropping or strong collision.

Make sure to keep it dry as residual water may cause leakage.

Evite exponer el termo a temperaturas extremas (frío o calor).

Do not put in oversized ice to avoid bottle deformation or breaking.

Note

Al añadir agua caliente con un hervidor, evite que el hervidor entre en contacto con la apertura del recipiente.

Evite caídas o golpes fuertes.

Material : Thermos body: 18/8 (304) stainless steel

Silicone Cover : Silicone

•

When you replace the silicone covers, put it on the table, scroll down the silicone cover to remove it can be removed. (For more details, please follow instructions)

When you need to install new set of cover, set the cover flat on a table and hold the bottom of the bottle to load the cover vertically downward onto the bottle.

Mantenimiento

• Lave el termo completamente después de cada uso. Despues de lavarlo, seque cuidadosamente el recipiente para evitar que se oxide.

• Use el complementado cepillo suave para limpiar el interior del termo, lave con detergente líquido neutro de cocina diluido, enjuague bien y séquelo. Limpie regularmente para prevenir malos olores.

• Use la brocha suave para limpiar el interior del termo, lave con detergente líquido neutro de cocina diluido, enjuague bien y séquelo. Limpie regularmente para prevenir malos olores.

Mantenimiento

• Lave el termo completamente después de cada uso. Despues de lavarlo, seque cuidadosamente el recipiente para evitar que se oxide.

• Use la brocha suave para limpiar el interior del termo, lave con detergente líquido neutro de cocina diluido, enjuague bien y séquelo. Limpie regularmente para prevenir malos olores.

•

• Use la brocha suave para limpiar el interior del termo, lave con detergente líquido neutro de cocina diluido, enjuague bien y séquelo. Limpie regularmente para prevenir malos olores.

• Use la brocha suave para limpiar el interior del termo, lave con detergente líquido neutro de cocina diluido, enjuague bien y séquelo. Limpie regularmente para prevenir malos olores.

Français

Garantie limitée

- HYDY s'engage à proposer des produits de qualité. La garantie ne couvre pas les dommages et les pertes causés par une utilisation incorrecte. Le consommateur doit être en mesure de fournir des factures et une preuve d'achat dans l'année suivant la consommation dans le cas de tout autre défaut. HYDY sera dans la mesure de fournir un produit identique ou similaire pour le remplacer.
- Do not use a microwave oven, steam oven or oven to heat.
- Do not place near radiators, heaters, or other high-temperature source to avoid bottle deformation, discoloration.
- Do not put the following beverages inside the bottle: ice, carbonated drinks: will increase the pressure inside the bottle and make the cap not able to be open; pressure can also cause sudden discharge of beverage and eventually break the bottle.

Note

- When adding hot water, do not allow the hot tea kettle come in contact with the opening.
- Bebidas con sal (p. ej. sopas): el interior del recipiente está fabricado de acero inoxidable. La sal puede provocar que se oxide, lo cual afecta al aislamiento del recipiente.
- Avoid dropping or strong collision.
- Make sure to keep it dry as residual water may cause leakage.
- Evite exponer el termo a temperaturas extremas (frío o calor).
- Do not put in oversized ice to avoid bottle deformation or breaking.

Précautions importantes

- L'eau chaude augmente la pression à l'intérieur de la bouteille thermos hermétiquement fermée, ce qui peut la rendre difficile à ouvrir. Auquel cas, ouvrez délicatement le couvercle pour laisser la pression s'échapper, et ainsi éviter les blessures ou brûlures.
- Beba con cuidado para evitar quemaduras al consumir bebidas calientes almacenadas dentro del termo. La superficie del termo no se calienta debido al aislamiento causado por el efecto del vacío.
- Asegúrese de mantener el producto seco. El líquido residual puede provocar derrames.
- Para reemplazar las coberturas de silicona, coloque el termo sobre una mesa y deslice la cobertura de silicona para quitarla.
- No rellene el termo con bloques de hielo grandes para evitar deformaciones o la ruptura del recipiente.

Notas

- Al añadir agua caliente con un hervidor, evite que el hervidor entre en contacto con la apertura del recipiente.
- Evite caídas o golpes fuertes.
- Material : Thermos body: 18/8 (304) stainless steel
- Glace, boissons gazeuses : la pression à l'intérieur de la bouteille thermos risque d'augmenter et d'empêcher le capuchon de s'ouvrir ; la pression peut également laisser la boisson s'échapper, voire jusqu'à briser la bouteille.
- • Para reemplazar las coberturas de silicona, coloque el termo sobre una mesa y deslice la cobertura de silicona para quitarla.
- • Ne remplissez pas la bouteille de liquides non potables, tels que le carburant ou autre liquide inflammable, corrosif, et toutes autres substancias químicas.
- • Evitez d'exposer la bouteille thermos à des températures très élevées.
- • Al abrir la tapa, evite colocar el termo cerca de su cara para la parte inferior del recipiente para introducir la cobertura en el recipiente verticalmente hacia abajo.

Español

Mantenimiento

- Use the complemented soft sponge brush to clean the inside layer of the bottle, wash with diluted neutral kitchen dish detergent, rinse thoroughly and wipe dry. Regular cleaning prevents odor.
- Do not add beverages when the lower cap is not removed to avoid overflow or burns.
- Do not use a microwave oven, steam oven or oven to heat.
- Do not place near radiators, heaters, or other high-temperature source to avoid bottle deformation, discoloration.
- Do not put the following beverages inside the bottle: ice, carbonated drinks: will increase the pressure inside the bottle and make the cap not able to be open; pressure can also cause sudden discharge of beverage and eventually break the bottle.

Mantenimiento

- Use the complemented soft sponge brush to clean the inside layer of the bottle, wash with diluted neutral kitchen dish detergent, rinse thoroughly and wipe dry. Regular cleaning prevents odor.
- Do not add beverages when the lower cap is not removed to avoid overflow or burns.
- Do not use a microwave oven, steam oven or oven to heat.
- Do not place near radiators, heaters, or other high-temperature source to avoid bottle deformation, discoloration.
- Do not put the following beverages inside the bottle: ice, carbonated drinks: will increase the pressure inside the bottle and make the cap not able to be open; pressure can also cause sudden discharge of beverage and eventually break the bottle.

Mantenimiento

- Use the complemented soft sponge brush to clean the inside layer of the bottle, wash with diluted neutral kitchen dish detergent, rinse thoroughly and wipe dry. Regular cleaning prevents odor.
- Do not add beverages when the lower cap is not removed to avoid overflow or burns.
- Do not use a microwave oven, steam oven or oven to heat.
- Do not place near radiators, heaters, or other high-temperature source to avoid bottle deformation, discoloration.
- Do not put the following beverages inside the bottle: ice, carbonated drinks: will increase the pressure inside the bottle and make the cap not able to be open; pressure can also cause sudden discharge of beverage and eventually break the bottle.

Mantenimiento

- Use the complemented soft sponge brush to clean the inside layer of the bottle, wash with diluted neutral kitchen dish detergent, rinse thoroughly and wipe dry. Regular cleaning prevents odor.
- Do not add beverages when the lower cap is not removed to avoid overflow or burns.
- Do not use a microwave oven, steam oven or oven to heat.
- Do not place near radiators, heaters, or other high-temperature source to avoid bottle deformation, discoloration.
- Do not put the following beverages inside the bottle: ice, carbonated drinks: will increase the pressure inside the bottle and make the cap not able to be open; pressure can also cause sudden discharge of beverage and eventually break the bottle.

Mantenimiento

- Use the complemented soft sponge brush to clean the inside layer of the bottle, wash with diluted neutral kitchen dish detergent, rinse thoroughly and wipe dry. Regular cleaning prevents odor.
- Do not add beverages when the lower cap is not removed to avoid overflow or burns.
- Do not use a microwave oven, steam oven or oven to heat.
- Do not place near radiators, heaters, or other high-temperature source to avoid bottle deformation, discoloration.
- Do not put the following beverages inside the bottle: ice, carbonated drinks: will increase the pressure inside the bottle and make the cap not able to be open; pressure can also cause sudden discharge of beverage and eventually break the bottle.

Mantenimiento

- Use the complemented soft sponge brush to clean the inside layer of the bottle, wash with diluted neutral kitchen dish detergent, rinse thoroughly and wipe dry. Regular cleaning prevents odor.
- Do not add beverages when the lower cap is not removed to avoid overflow or burns.
- Do not use a microwave oven, steam oven or oven to heat.
- Do not place near radiators, heaters, or other high-temperature source to avoid bottle deformation, discoloration.
- Do not put the following beverages inside the bottle: ice, carbonated drinks: will increase the pressure inside the bottle and make the cap not able to be open; pressure can also cause sudden discharge of beverage and eventually break the bottle.

Mantenimiento

- Use the complemented soft sponge brush to clean the inside layer of the bottle, wash with diluted neutral kitchen dish detergent, rinse thoroughly and wipe dry. Regular cleaning prevents odor.
- Do not add beverages when the lower cap is not removed to avoid overflow or burns.
- Do not use a microwave oven, steam oven or oven to heat.
- Do not place near radiators, heaters, or other high-temperature source to avoid bottle deformation, discoloration.
- Do not put the following beverages inside the bottle: ice, carbonated drinks: will increase the pressure inside the bottle and make the cap not able to be open; pressure can also cause sudden discharge of beverage and eventually break the bottle.

Mantenimiento

- Use the complemented soft sponge brush to clean the inside layer of the bottle, wash with diluted neutral kitchen dish detergent, rinse thoroughly and wipe dry. Regular cleaning prevents odor.
- Do not add beverages when the lower cap is not removed to avoid overflow or burns.
- Do not use a microwave oven, steam oven or oven to heat.
- Do not place near radiators, heaters, or other high-temperature source to avoid bottle deformation, discoloration.
- Do not put the following beverages inside the bottle: ice, carbonated drinks: will increase the pressure inside the bottle and make the cap not able to be open; pressure can also cause sudden discharge of beverage and eventually break the bottle.

Mantenimiento

- Use the complemented soft sponge brush to clean the inside layer of the bottle, wash with diluted neutral kitchen dish detergent, rinse thoroughly and wipe dry. Regular cleaning prevents odor.
- Do not add beverages when the lower cap is not removed to avoid overflow or burns.
- Do not use a microwave oven, steam oven or oven to heat.
- Do not place near radiators, heaters, or other high-temperature source to avoid bottle deformation, discoloration.
- Do not put the following beverages inside the bottle: ice, carbonated drinks: will increase the pressure inside the bottle and make the cap not able to be open; pressure can also cause sudden discharge of beverage and eventually break the bottle.

Mantenimiento

- Use the complemented soft sponge brush to clean the inside layer of the bottle, wash with diluted neutral kitchen dish detergent, rinse thoroughly and wipe dry. Regular cleaning prevents odor.
- Do not add beverages when the lower cap is not removed to avoid overflow or burns.
- Do not use a microwave oven, steam oven or oven to heat.
- Do not place near radiators, heaters, or other high-temperature source to avoid bottle deformation, discoloration.
- Do not put the following beverages inside the bottle: ice, carbonated drinks: will increase the pressure inside the bottle and make the cap not able to be open; pressure can also cause sudden discharge of beverage and eventually break the bottle.

Mantenimiento

- Use the complemented soft sponge brush to clean the inside layer of the bottle, wash with diluted neutral kitchen dish detergent, rinse thoroughly and wipe dry. Regular cleaning prevents odor.
- Do not add beverages when the lower cap is not removed to avoid overflow or burns.
- Do not use a microwave oven, steam oven or oven to heat.
- Do not place near radiators, heaters, or other high-temperature source to avoid bottle deformation, discoloration.
- Do not put the following beverages inside the bottle: ice, carbonated drinks: will increase the pressure inside the bottle and make the cap not able to be open; pressure can also cause sudden discharge of beverage and eventually break the bottle.

Mantenimiento

- Use the complemented soft sponge brush to clean the inside layer of the bottle, wash with diluted neutral kitchen dish detergent, rinse thoroughly and wipe dry. Regular cleaning prevents odor.
- Do not add beverages when the lower cap is not removed to avoid overflow or burns.
- Do not use a microwave oven, steam oven or oven to heat.
- Do not place near radiators, heaters, or other high-temperature source to avoid bottle deformation, discoloration.
- Do not put the following beverages inside the bottle: ice, carbonated drinks: will increase the pressure inside the bottle and make the cap not able to be open; pressure can also cause sudden discharge of beverage and eventually break the bottle.

Mantenimiento

- Use the complemented soft sponge brush to clean the inside layer of the bottle, wash with diluted neutral kitchen dish detergent, rinse thoroughly and wipe dry. Regular cleaning prevents odor.
- Do not add beverages when the lower cap is not removed to avoid overflow or burns.
- Do not use a microwave oven, steam oven or oven to heat.
- Do not place near radiators, heaters, or other high-temperature source to avoid bottle deformation, discoloration.
- Do not put the following beverages inside the bottle: ice, carbonated drinks: will increase the pressure inside the bottle and make the cap not able to be open; pressure can also cause sudden discharge of beverage and eventually break the bottle.

Mantenimiento

- Use the complemented soft sponge brush to clean the inside layer of the bottle, wash with diluted neutral kitchen dish detergent, rinse thoroughly and wipe dry. Regular cleaning prevents odor.
- Do not add beverages when the lower cap is not removed to avoid overflow or burns.
- Do not use a microwave oven, steam oven or oven to heat.
-

Follow us on



#hydybottle

#myhydy

#hydy

日本語

保証期間

- HYDYは優れた品質の製品をご提供するために力を注いでおります。正常なご使用での消耗と、不適切なご使用による破損は保証期間内での保証範囲に含まれておりません。その他の生産による瑕疵等は、消費者の皆様によりレシート及びご購入の証明をご提示いただき、1年以内の場合、HYDYでは同じあるいは類似製品と、生産による瑕疵のある製品の交換対応をさせていただくことができます。
- HYDYでは意匠特許と商標の保護を取得しています。

ご使用上の注意

- 熱湯は密封された保温ボトルの圧力を増加させ、ボトルキャップ・グループが開けにくくなることがあります。この際ケガや火傷を防止するために、キャップを注意して回し開け、圧力を開放してください。
- 長期間飲み物を保温ボトル内に保存せず、できる限り早く飲み終わらせください。
- 飲用でない液体、液体燃料、可燃性、腐食、化学物質は詰めないでください。
- 牛乳、乳製品、ジュースなど：成分が容易に変質、長時間の保存によ
- Ne mettez pas de gros glaçons à l'intérieur de la bouteille, afin d'éviter qu'elle ne se déforme ou ne se brise.
- Contenance : 10oz / 300 ml
- Taille des produits : 100 mm X 115 mm (diamètre x hauteur)
- Matériel :
- Constitution du thermos : acier inoxydable 18/8 (type 304)
- Capuchon : Tritan
- Couvercle en silicone : silicone

Designed in California



Online Shop
www.myhydy.com



- 保温ボトルが非常に高温あるいは寒さの環境にさらされるのを避けてください。
- 幼・乳児の手が届く場所や子どもをボトルで遊ばせないでください。火傷やケガをする恐れがあります。
- 保温ボトル内に熱い飲み物が入っている際は、火傷を防止するため、飲用の際にはご注意ください。保温ボトルは2層の真空断熱効果により、熱い飲み物を入れた後も保温ボトルの外側が熱くなりません。
- 飲み物を入れる際には容量をオーバーさせないようにし、保温ボトル内に十分な高さのスペースを保留してください。水位が高すぎるとき開閉が困難となります。ボトルキャップを開閉する際にはも熱湯が溢れ出す危険があります。
- キャップを開ける際には、保温ボトルを斜めにしたり、顔に近づけたりしないでください。熱い飲み物や熱気が噴出して火傷を負う恐れがあります。
- お車の運転時には、保温ボトル内の熱い飲み物の飲用をお勧めしません。突発的な運転上の状況により火傷を負う恐れがあります。
- 溢れ出したり火傷を防止するために、下層のボトルキャップ・グループを設置した状態で飲み物を入れないでください。
- 電子レンジ、スチームオーブンあるいはオーブンでの加熱はしないでください。
- ボトルの変形や変色を防止するために、暖房機、ストーブ或是ガスコンロなどの火気や高温の場所の付近に置かないでください。
- 以下の飲み物を入れないでください：
- ドライアイス、炭酸飲料：ボトル内部の圧力を増加させ、ボトルキャップセットを開かなくさせます。圧力により飲み物が吹出したり、ボトルキャップセットが破損して飛び散るなどの危険が発生する恐れがあります。
- 長期間飲み物を保温ボトル内に保存せず、できる限り早く飲み終わらせください。
- 飲用でない液体、液体燃料、可燃性、腐食、化学物質は詰めないでください。
- 牛乳、乳製品、ジュースなど：成分が容易に変質、長時間の保存によ

- り腐り発酵によりメタンが発生することにより、ボトル本体内部の圧力を増加させ、飲み物の噴出やボトルキャップセットが破損して飛び散るなどの危険が発生する恐れがあります。
- シリコンストリーブを交換する際は、机の上に平らにおいて、シリコンストリーブを上から下に向けて巻けば取り外せます。(詳細はイラストの指示をご参照ください。)
- 開車時、不建議飲用保温杯内熱飲，恐出現突然而的行車狀況而造成燙傷。
- 新しいシリコンストリーブを装着する際は、シリコンストリーブを机の上に平に置いて底の部分を握り、保温ボトルを垂直に下に向けて押し込めばシリコンストリーブ内に装着することができます。

メンテナンス方法

- 容量: 10オンス/300ml
- 製品サイズ: 100mm X 115mm (直径×高さ)
- 材質:
- 保温ボトル本体: 18/8 (304) ステンレススチール
- カップカバー: Tritan
- シリコンストリーブ: シリコン

注意

- 注入飲料時請勿超量裝盛，請於保溫杯內預留足夠的高度空間，以免將保溫杯露于強烈高溫或強冷環境中。
- 請勿放入烘碗機、餐具乾燥機或煮沸的水中清洗消毒。
- 杯體內部請使用附把手的軟質海綿刷，沾上以溫水稀釋過的廚房用中性洗碗精清洗，沖洗後充分擦拭水分並立晾干。勤加清潔可防止異味，常保清潔。

注意

- 注入熱水時，請勿將滾燙的茶壺接觸到杯口。
- 注入飲料時請勿超量裝盛，請於保溫杯內預留足夠的高度空間，以免將保溫杯露于強烈高溫或強冷環境中。
- 新的シリコンストリーブを装着する際は、シリコンストリーブを机の上に平に置いて底の部分を握り、保温ボトルを垂直に下に向けて押し込めばシリコンストリーブ内に装着することができます。

メンテナンス方法

- 容量: 10オンス/300ml
- 製品尺寸: 100公厘X115公厘(直徑x高度)
- 材料: 保溫杯體: 18/8 (304) 不鏽鋼
- 杯蓋: Tritan
- 矽膠套: 矽膠

繁體中文

有限保固

- HYDY致力於提供優質產品。正常使用之耗損和不當使用造成的破壞不包含在有限保固範圍內。其他因生產所產生的瑕疪等，請消費者出示發票及購買證明，在消費一年內，HYDY可提供相同或類似產品來取代生產瑕疪的產品。
- HYDY擁有設計專利和商標保護。

簡體中文

有限保固

- HYDY致力於提供優質產品。正常使用之耗損和不當使用造成的破壞不包含在有限保固範圍內。其他因生產所產生的瑕疪等，請消費者出示發票及購買證明，在消費一年內，HYDY可提供相同或類似產品來取代生產瑕疪的產品。
- HYDY擁有設計專利和商標保護。

使用守則

- 若杯蓋的密封圈磨損或者滲漏，請立即停止使用。
- 不宜長期儲存飲料於保溫杯內，應盡快喝完。
- 替換矽膠套時，請平放於桌上，矽膠套由上向下捲即可取下。
- 需裝新的矽膠套時，請將矽膠套平放於桌面並握住底部，保溫杯垂直向下壓入即裝入矽膠套內。

保養方法

- 為常保清潔，每次使用後請徹底清洗保溫杯。請於清洗後將保溫杯抹乾或晾乾，以免留下水漬及引致生銹。
- 清洗前，請將瓶杯、杯蓋及矽膠套組分開。用稀釋過的廚房用中性洗碗精清洗。沖洗後充分擦拭水分並晾乾。
- 避免將保溫杯露於強烈高溫或強冷環境中。
- 杯體內部請使用附把手的軟質海綿刷，沾上以溫水稀釋過的廚房用中性洗碗精清洗，沖洗後充分擦拭水分並立晾干。勤加清潔可防止異味，常保清潔。

使用守則

- 若杯蓋的密封圈磨損或者滲漏，請立即停止使用。
- 不宜長期儲存飲料於保溫杯內，應盡快喝完。
- 替換矽膠套時，請平放於桌上，矽膠套由上向下捲即可取下。
- 需裝新的矽膠套時，請將矽膠套平放於桌面並握住底部，保溫杯垂直向下壓入即裝入矽膠套內。

保養方法

- 為常保清潔，每次使用後請徹底清洗保溫杯。請於清洗後將保溫杯抹乾或晾乾，以免留下水漬及引致生銹。
- 清洗前，請將瓶杯、杯蓋及矽膠套組分開。用稀釋過的廚房用中性洗碗精清洗。沖洗後充分擦拭水分並晾乾。
- 避免將保溫杯露於強烈高溫或強冷環境中。
- 杯體內部請使用附把手的軟質海綿刷，沾上以溫水稀釋過的廚房用中性洗碗精清洗，沖洗後充分擦拭水分並立晾干。勤加清潔可防止異味，常保清潔。

ご注意

- 熱湯を注ぎ入れる時は、熱せられたボットをボトルの口に接触させないでください。
- 保溫杯内放有熱飲時，請小心飲用，以免燙傷。因保溫杯的雙層真空隔熱效果，放入熱飲後保溫杯外側不會變熱。
- 落としたり、ぶつけたりといった強い衝撃を避けてください。

保养方法

- 为常保清洁，每次使用后请彻底清洗保温杯。请于清洗后将保温杯抹干或晾干，以免留下水渍及引致生锈。
- 清洗前，请将瓶杯、杯盖及硅胶套组分开。用稀释过的厨房用中性洗碗精清洗。冲洗后充分擦拭水分并晾干。
- 避免将保温杯露于强烈高温或强冷环境中。
- 杯体内部请使用附把手的软质海绵刷，沾上以温水稀释过的厨房用中性洗碗精清洗，冲洗后充分擦拭水分并立晾干。勤加清洁可防止异味，常保清洁。

注意

- 热汤注入时，请勿将热水直接倒入保温杯中，以免烫伤。因保温杯的双层真空隔热效果，放入热水后保温杯外侧不会变热。
- 跌落或撞击时，请勿将保温杯掉落在坚硬的地面上，以免摔坏。

保养方法

- 为常保清洁，每次使用后请彻底清洗保温杯。请于清洗后将保温杯抹干或晾干，以免留下水渍及引致生锈。
- 清洗前，请将瓶杯、杯盖及硅胶套组分开。用稀释过的厨房用中性洗碗精清洗。冲洗后充分擦拭水分并晾干。
- 避免将保温杯露于强烈高温或强冷环境中。
- 杯体内部请使用附把手的软质海绵刷，沾上以温水稀释过的厨房用中性洗碗精清洗，冲洗后充分擦拭水分并立晾干。勤加清洁可防止异味，常保清洁。

注意

- 热汤注入时，请勿将热水直接倒入保温杯中，以免烫伤。因保温杯的双层真空隔热效果，放入热水后保温杯外侧不会变热。
- 跌落或撞击时，请勿将保温杯掉落在坚硬的地面上，以免摔坏。

保养方法

- 为常保清洁，每次使用后请彻底清洗保温杯。请于清洗后将保温杯抹干或晾干，以免留下水渍及引致生锈。
- 清洗前，请将瓶杯、杯盖及硅胶套组分开。用稀释过的厨房用中性洗碗精清洗。冲洗后充分擦拭水分并晾干。
- 避免将保温杯露于强烈高温或强冷环境中。
- 杯体内部请使用附把手的软质海绵刷，沾上以温水稀释过的厨房用中性洗碗精清洗，冲洗后充分擦拭水分并立晾干。勤加清洁可防止异味，常保清洁。

注意

- 热汤注入时，请勿将热水直接倒入保温杯中，以免烫伤。因保温杯的双层真空隔热效果，放入热水后保温杯外侧不会变热。
- 跌落或撞击时，请勿将保温杯掉落在坚硬的地面上，以免摔坏。

保养方法

- 为常保清洁，每次使用后请彻底清洗保温杯。请于清洗后将保温杯抹干或晾干，以免留下水渍及引致生锈。
- 清洗前，请将瓶杯、杯盖及硅胶套组分开。用稀释过的厨房用中性洗碗精清洗。冲洗后充分擦拭水分并晾干。
- 避免将保温杯露于强烈高温或强冷环境中。
- 杯体内部请使用附把手的软质海绵刷，沾上以温水稀释过的厨房用中性洗碗精清洗，冲洗后充分擦拭水分并立晾干。勤加清洁可防止异味，常保清洁。

注意

- 热汤注入时，请勿将热水直接倒入保温杯中，以免烫伤。因保温杯的双层真空隔热效果，放入热水后保温杯外侧不会变热。
- 跌落或撞击时，请勿将保温杯掉落在坚硬的地面上，以免摔坏。

保养方法

- 为常保清洁，每次使用后请彻底清洗保温杯。请于清洗后将保温杯抹干或晾干，以免留下水渍及引致生锈。
- 清洗前，请将瓶杯、杯盖及硅胶套组分开。用稀释过的厨房用中性洗碗精清洗。冲洗后充分擦拭水分并晾干。
- 避免将保温杯露于强烈高温或强冷环境中。
- 杯体内部请使用附把手的软质海绵刷，沾上以温水稀释过的厨房用中性洗碗精清洗，冲洗后充分擦拭水分并立晾干。勤加清洁可防止异味，常保清洁。

注意

- 热汤注入时，请勿将热水直接倒入保温杯中，以免烫伤。因保温杯的双层真空隔热效果，放入热水后保温杯外侧不会变热。
- 跌落或撞击时，请勿将保温杯掉落在坚硬的地面上，以免摔坏。

保养方法

- 为常保清洁，每次使用后请彻底清洗保温杯。请于清洗后将保温杯抹干或晾干，以免留下水渍及引致生锈。
- 清洗前，请将瓶杯、杯盖及硅胶套组分开。用稀释过的厨房用中性洗碗精清洗。冲洗后充分擦拭水分并晾干。
- 避免将保温杯露于强烈高温或强冷环境中。
- 杯体内部请使用附把手的软质海绵刷，沾上以温水稀释过的厨房用中性洗碗精清洗，冲洗后充分擦拭水分并立晾干。勤加清洁可防止异味，常保清洁。

注意

- 热汤注入时，请勿将热水直接倒入保温杯中，以免烫伤。因保温杯的双层真空隔热效果，放入热水后保温杯外侧不会变热。
- 跌落或撞击时，请勿将保温杯掉落在坚硬的地面上，以免摔坏。

保养方法

- 为常保清洁，每次使用后请彻底清洗保温杯。请于清洗后将保温杯抹干或晾干，以免留下水渍及引致生锈。
- 清洗前，请将瓶杯、杯盖及硅胶套组分开。用稀释过的厨房用中性洗碗精清洗。冲洗后充分擦拭水分并晾干。
- 避免将保温杯露于强烈高温或强冷环境中。
- 杯体内部请使用附把手的软质海绵刷，沾上以温水稀释过的厨房用中性洗碗精清洗，冲洗后充分擦拭水分并立晾干。勤加清洁可防止异味，常保清洁。

注意

- 热汤注入时，请勿将热水直接倒入保温杯中，以免烫伤。因保温杯的双层真空隔热效果，放入热水后保温杯外侧不会变热。
- 跌落或撞击时，请勿将保温杯掉落在坚硬的地面上，以免摔坏。

保养方法

- 为常保清洁，每次使用后请彻底清洗保温杯。请于清洗后将保温杯抹干或晾干，以免留下水渍及引致生锈。
- 清洗前，请将瓶杯、杯盖及硅胶套组分开。用稀释过的厨房用中性洗碗精清洗。冲洗后充分擦拭水分并晾干。
- 避免将保温杯露于强烈高温或强冷环境中。
- 杯体内部请使用附把手的软质海绵刷，沾上以温水稀释过的厨房用中性洗碗精清洗，冲洗后充分擦拭水分并立晾干。勤加清洁可防止异味，常保清洁。

注意

- 热汤注入时，请勿将热水直接倒入保温杯中，以免烫伤。因保温杯的双层真空隔热效果，放入热水后保温杯外侧不会变热。
- 跌落或撞击时，请勿将保温杯掉落在坚硬的地面上，以免摔坏。

保养方法

- 为常保清洁，每次使用后请彻底清洗保温杯。请于清洗后将保温杯抹干或晾干，以免留下水渍及引致生锈。
- 清洗前，请将瓶杯、杯盖及硅胶套组分开。用稀释过的厨房用中性洗碗精清洗。冲洗后充分擦拭水分并晾干。
- 避免